



1

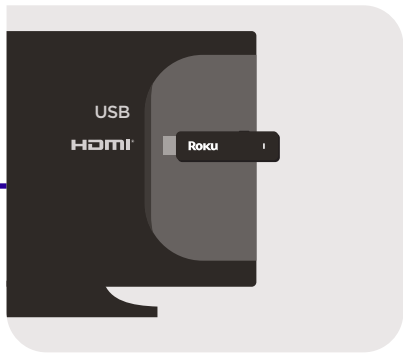


OR/O/OU

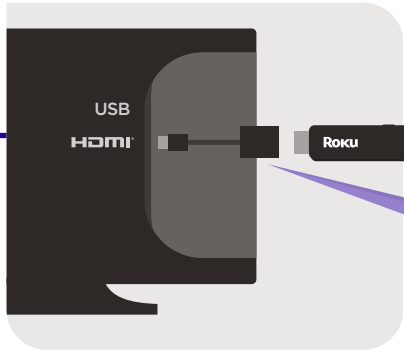


roku.com/go/wireless

2

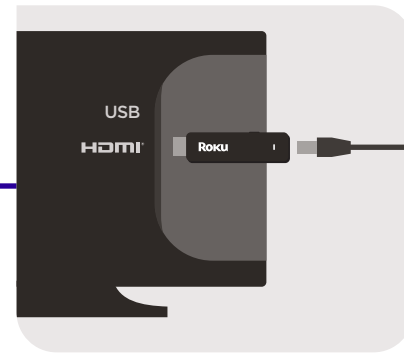


Best performance
Mejor rendimiento
Meilleure performance

OR/O/OU

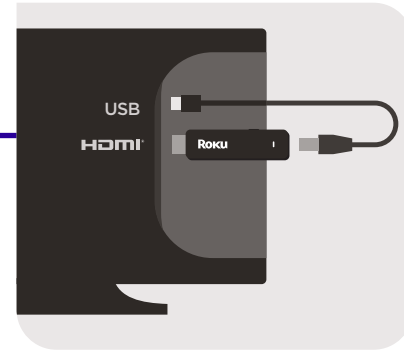

USB may not work with all TVs.
USB podría no funcionar con todos los TVs.
USB pourrait ne pas fonctionner avec tous les TVs.

3

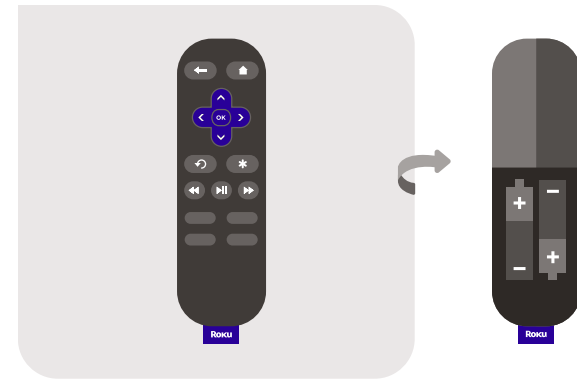

go.roku.com/rss



[go.roku.com/rss](https://www.roku.com/rss)

More info, full set-up guides, and safety precautions

Más información, guías de configuración completos y precauciones de seguridad

Plus d'infos, guides de set-up complet, et les précautions de sécurité



FREE

www.roku.com/go/wireless

HDMI® extender may be required for some TVs. A free extender is available by visiting [roku.com/go/wireless](https://www.roku.com/go/wireless)

Extender HDMI® peut être nécessaire pour certains téléviseurs. Une rallonge est disponible gratuitement par [roku.com/go/wireless](https://www.roku.com/go/wireless) visiter.

Extensor HDMI® puede ser necesaria en algunos televisores. Un extensor libre está disponible por visitar [roku.com/go/wireless](https://www.roku.com/go/wireless)



4100000177-R02



ROKU[®]
Streaming Stick